



**Please have all accessories professionally installed, or have your assembly verified by a professional bicycle mechanic.**

We've learned that a very limited amount of bicycles require a simple hub adjustment. If you've felt your hub periodically disengage or shift between gears 1 and 2 automatically, please follow these directions to easily solve the problem. If you need to make the adjustment, know that it's a quick and one time adjustment.

Instructions:

**Step 1.**

Shift into gear 2

**Step 2.**

Loosen the nut on the rear hub control unit barrel adjuster with 10mm wrench or adjustable wrench (figure A)

**Step 3.**

Turn the nut counter-clockwise until the yellow line sits just past the line closest to the hub (figure B)

**Step 4.** Re-tighten the nut

Questions? Contact us anytime:

- [Info@prioritybicycles.com](mailto:Info@prioritybicycles.com)
- (917) 819-1665



fig A.



fig B.